

# Versatronik® 505 BACnet Gateway

## Applicable Gateways

Versatronik 505 NR2/BACIP  
Versatronik 505D NR2/BACIP



## Quick Start-up Assistant


### Important information before you get started

This device is not plug and play. A few configuration variables will need to be set before the device becomes usable. Additionally, the Vitotronic cascade and boiler controls need to be configured for a multiple boiler system and participant numbers should be set. A participant check should be performed.




### Connections

1. COM4 - RJ45 connector to NR2 controls
2. COM2 RJ45 connector to BMS IP network

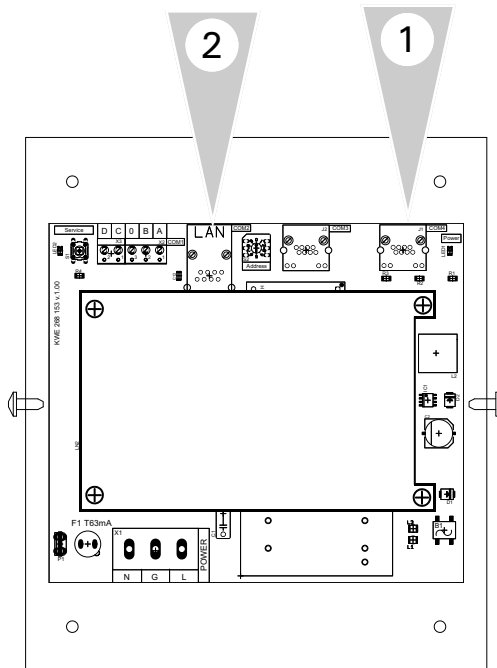

120VAC Versatronik 505 NR2/BACIP

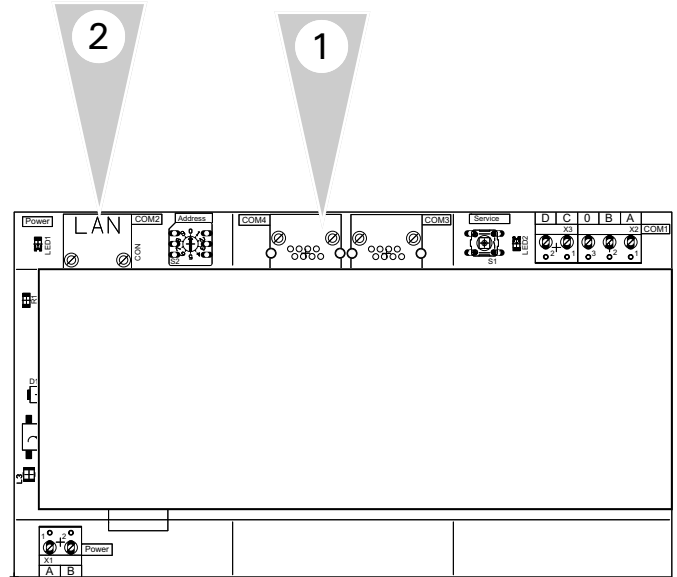

24VAC Versatronik 505D NR2/BACIP

### NOTE:

The information provided in this Quick Start Up Guide is only offered as a supplement to the Versatronik gateway installation manual and does not replace the manual in whole or in part.

## Versatronik 505 BACIP Quick Start Up

### BACnet IP address and Node settings

The IP address and BACnet ID can be set through a web-interface. By default you can find this page at <http://192.168.88.89/admin> and login using the user name / password "admin" and "admin" (You will need to change your computer's address to 192.168.88.90).

\*See the User Guide for detailed information on how to gain access.

### Configuration variables

The Versatronik 505 NR2 / BACIP gateway needs to be configured with the participant numbers (Node IDs) of the NR2 controls you want to connect to.

Point	Point Description	Details
<b>AO1</b>	Unit settings	0 = °C, 1 = °F
<b>AO2</b>	Boiler 1 LON Address	Participant # / Node ID (Address 77) Default 1 -4 for Vitotronic 100 controls Add 100 (101 - 104) for KK10LON control
<b>AO3</b>	Boiler 2 LON Address	
<b>AO4</b>	Boiler 3 LON Address	
<b>AO5</b>	Boiler 4 LON Address	
<b>AO6</b>	Zone/Cascade/Boiler LON Address	Participant # of cascade/zone control Default 5 for Vitotronic 300 control Add 200 (205) for MW2 control (for use with WB2B boiler over KM-BUS)
<b>AO7</b>	Number of Zones on the Zone/Cascade/Boiler	Number of zones on the cascade/zone control. Including the common supply zone (A1)

\*See the User Guide for more detailed instructions ([www.kwe-tech.com](http://www.kwe-tech.com))

### IMPORTANT

Read and save these instructions for future reference

KWE Technologies Group  
750 McMurray Road  
Waterloo, Ontario, Canada  
N2V 2G5  
Tel: (519) 747-5042  
Fax: (519) 747-4448  
[www.kwe-tech.com](http://www.kwe-tech.com)  
[info@kwe-tech.com](mailto:info@kwe-tech.com)

